

Search and Secure Procedure

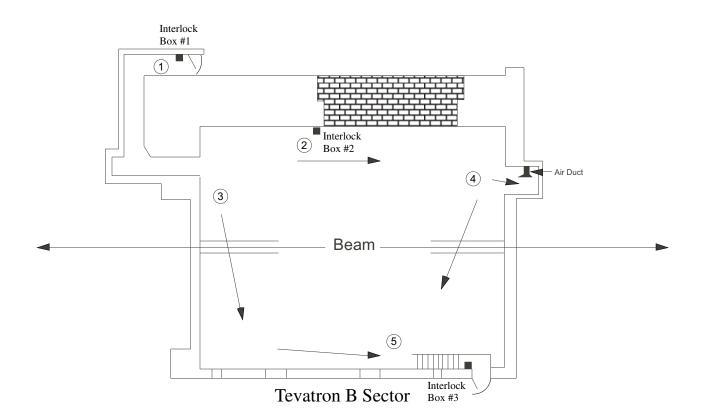

- 1. "A" and "B" reset Interlock box #1.
- 2. "A" resets Interlock box #2.
- 3. "B" sweeps the area going to the stairwell.
- 4. "A" sweeps the area while on the way to check the ventilation duct alcove.
- 5. "A" and "B" meet, reset Interlock box #3, and they control access out of C0 back into B-Sector, to continue with the Tevatron search and secure.

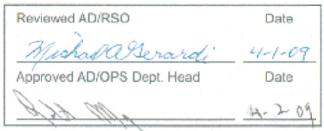

spb 17 Dec 2007 Version 1.0